



NAVODILO ZA PRIKLOP POTENCIOMETRA IN STIKALA NA FREKVENČNI PRETVORNIK iG5A IN iS7

➤ PRIKLOP POTENCIOMETRA

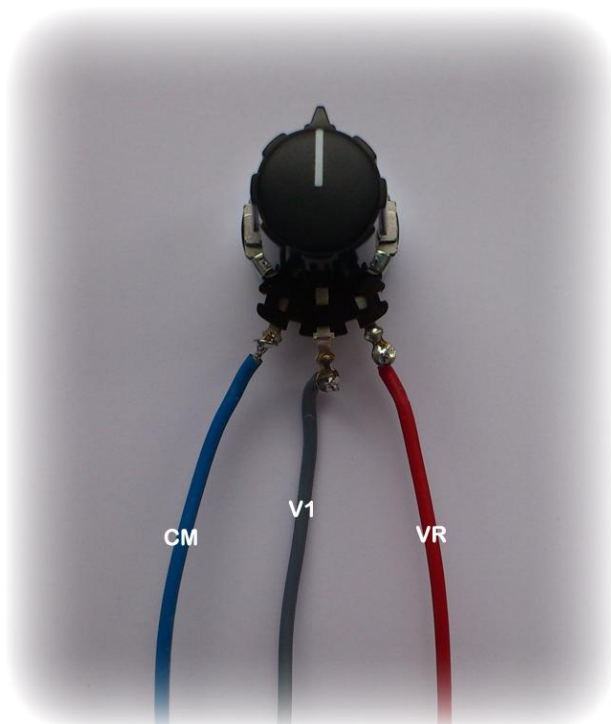

Pogled s sprednje strani (strani gumba):

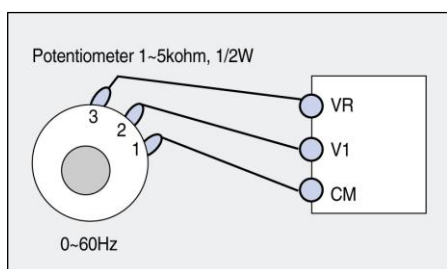

➤ PRIKLOP STIKALA



Priklop stikala:

